1. Use tap screws to secure bridge to wall strips, repeat on other side

2. Place wall strip/bridges against wall
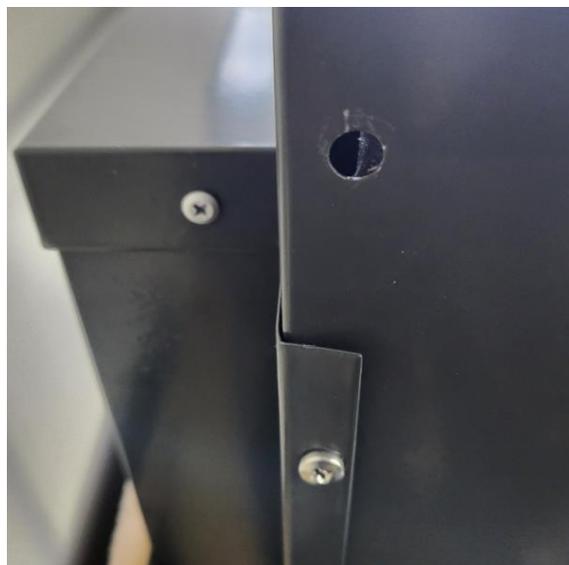

3. Loosely secure wall strip to wall

4. Loosely secure wall strip (3 points) using screw or bolt if brick wall

5. Connect side panel to wall strips on both sides using M6 screws

6. Sides now connected to wall strips/bridges

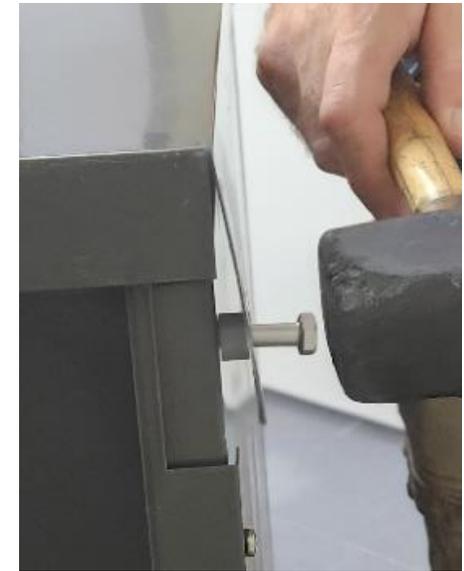**7. Join front panel to side panel with 2x M6 screws, repeating for other side**

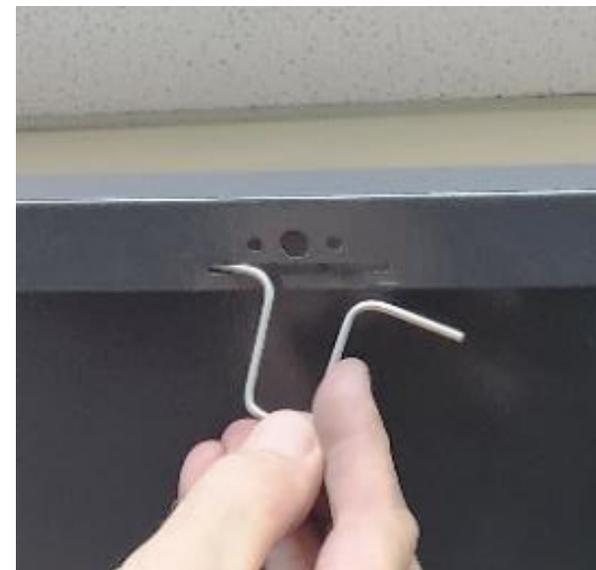**8. Centre box to ensure square and place lid on top; tap bolt & washer in place**

9. Tap bolt & washer in place; tighten nut

10. Repeat bolt/washer/nut for lid

11. Confirm lid is square with box

12. Insert latch hook into underside of lid
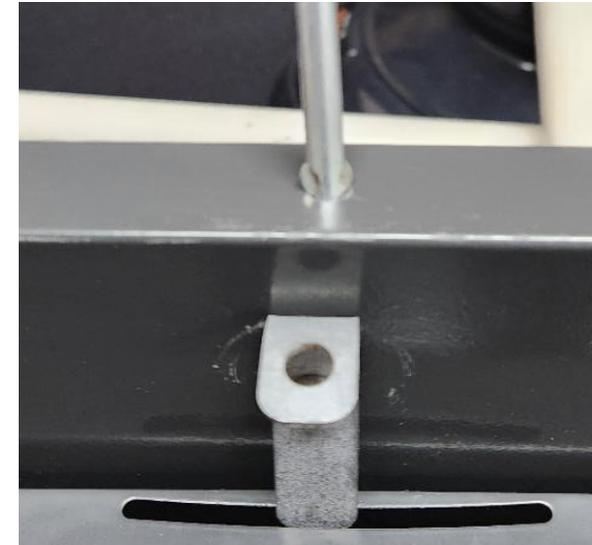
13. Screw latch onto front panel

14. Insert handle into door until you hear a click

15. Position door into front panel

16. Insert latch into door to hold in place

17. Insert door stay into hole at top of front panel

84. Insert door stay into hole in underside of lid to hold open

19. Door stay holds lid open when connected to both holes

20. Store door stay inside front panel when box is closed

Installation complete!