



1. Position rear panel



2. Join side panel into rear panel



3. Join side to rear panel with 2x M6 screws, repeating for other side



4. Join front panel to side panel with 2x M6 screws, repeating for other side



5. Centre box to ensure square and place lid on top; tap bolt & washer in place



6. Repeat bolt/washer/nut for lid



7. Insert latch hook into underside of lid



8. Confirm lid is square with box



9. Screw latch onto front panel




10. Insert handle into door until you hear a click



11. Position door into front panel



12. Insert latch into door to hold in place

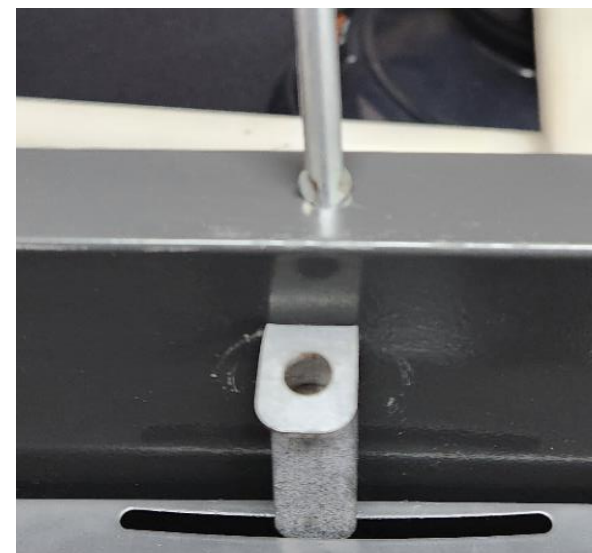

13. Insert door stay into hole at top of front panel



14. Insert door stay into hole in underside of lid to hold open



15. Door stay holds lid open when connected to both holes



16. Store door stay inside front panel when box is closed



17. Installation complete